



Common failures and solutions

Failure causes		Failure causes	
1	Switch on, the drive adapter runs in one-way operation	1	Switch on, the drive adapter runs in one-way operation
2	motor starts slowly or not work	2	motor starts slowly or not work
3	Motor stops suddenly after running	3	Motor stops suddenly after running
4	Abnormal sound during roller	4	Abnormal sound during roller

7 Down limit setting

Switch on

Press down button one time

Using special regulator to adjust "+", and rotating red worm when need to increase the down distance

When down limit distance achieves the desired location, stop rotating red worm and press the stop button

Down limit setting is OK

When motor doesn't work stop rotating red or white worm with regulator.

9 Up limit setting

Switch on

Press up button one time

Using special regulator to adjust "+", and rotating white worm when need to increase the up distance

When up limit distance achieves the desired location, stop rotating white worm and press the stop button

Up limit setting is OK

When motor doesn't work stop rotating red or white worm with regulator.

