



Remote Programming Instructions

Remote Operation


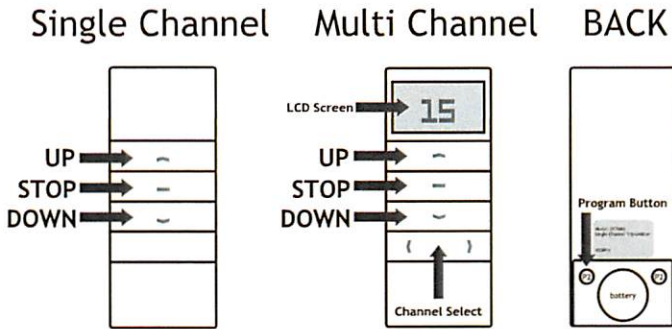


1

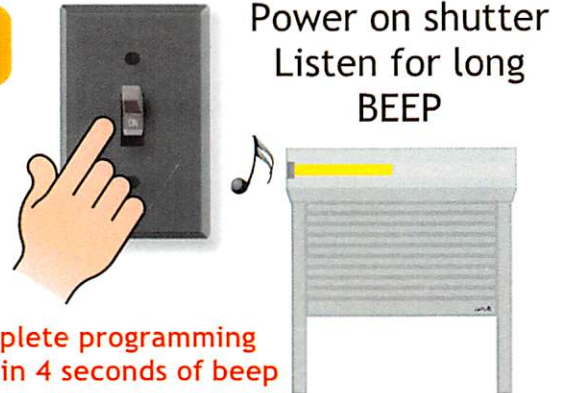


When Motor is on Outside Left

When Motor is on Outside Right

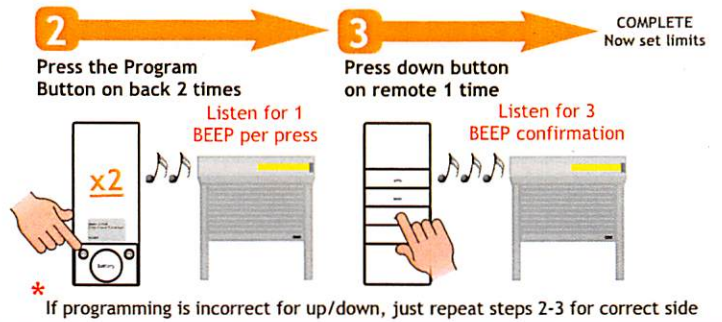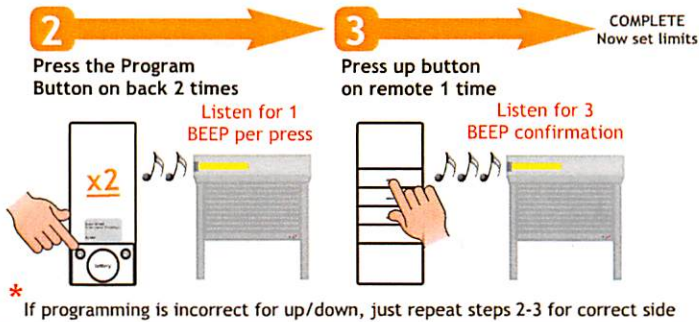


Limit Setting Instructions

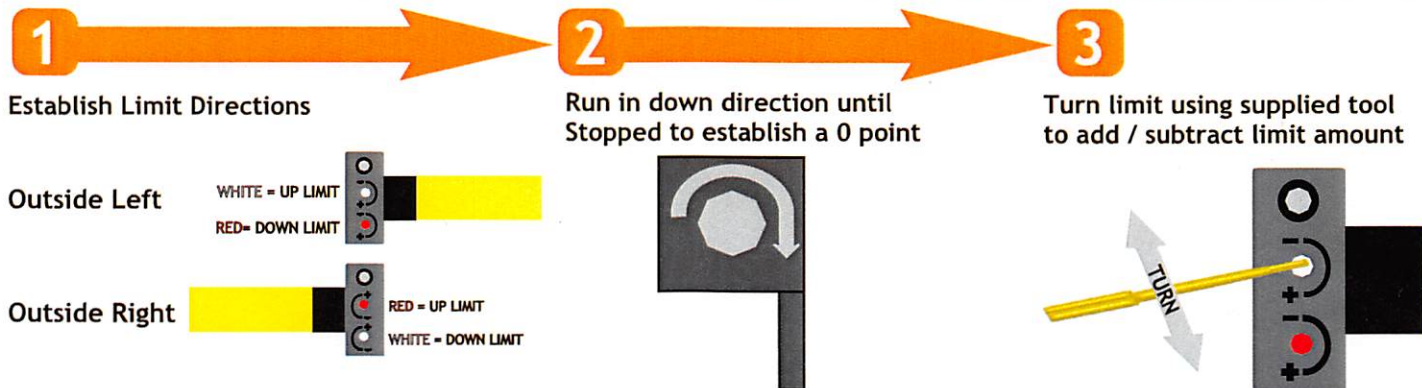

Additional Programming Instructions

Jumping programming

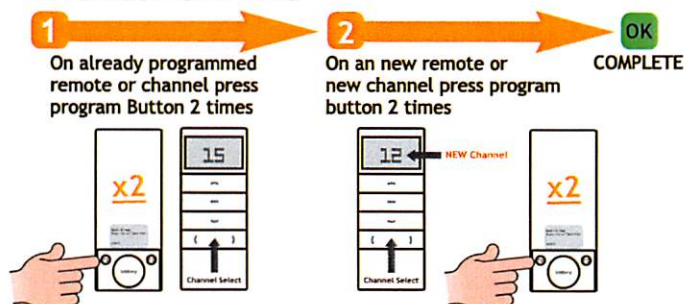

Factory Reset programming

